Food Waste Grinder Operation Instructions

Start of Day / Start of Shift:

1. Turn the main disconnect switch to the OFF position at the grinder control panel
2. Remove rubber baffle and make sure the grinder body is free of any waste or debris. Place rubber baffle back on the grinder inlet

Run:

1. Turn the main disconnect switch the ON position at the grinder control panel. Drain will open
2. Press the green start button to start the grinder. Once water is flowing begin to process waste
   - Do not fill the grinder with food and start the unit with the grinder body full

Stop:

1. Press the red stop button. The unit will run for 2 minutes and automatically shut down
   - Do not feed any waste into the unit during this time
2. To stop immediately, press the stop button twice

End of Day / End of Shift:

1. Press the blue labeled timed stop button
   - Do not feed any waste into the unit. The grinder will run for 2 minutes to flush all the solids out of the system and into the extractor
   - Unit will turn off and automatically drain at the end of the timed stop cycle
2. Turn the main disconnect switch to the OFF position at the grinder control panel
3. Remove the rubber baffle over the grinder body and rinse out any remaining food waste

Fault code:

1. If a fault occurs, the red light will flash in a repeating sequence
2. Count the number of flashes, and refer to the flash code chart on the drawing inside the control panel to identify the source of the fault

These items can be put into the grinder:


Cooked Bones


Bread & Snacks


Fruit


Vegetables


Meats / Fish

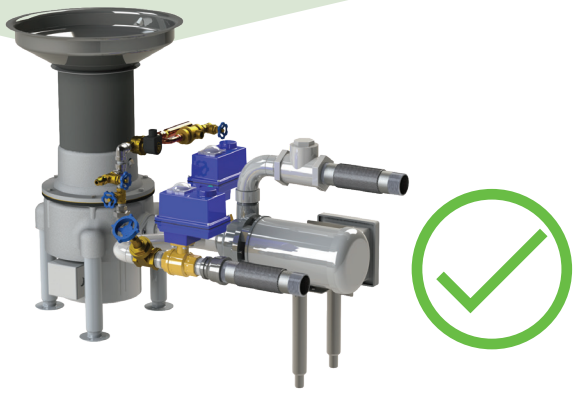

These items cannot be put into the grinder:


Wood


Glasses, Bottles, Jars


China


Disposables


Silverware


Paper & Napkins


Towels / Rags


Scrub Pads


Shrink wrap / Cellophane


Metal of any kind

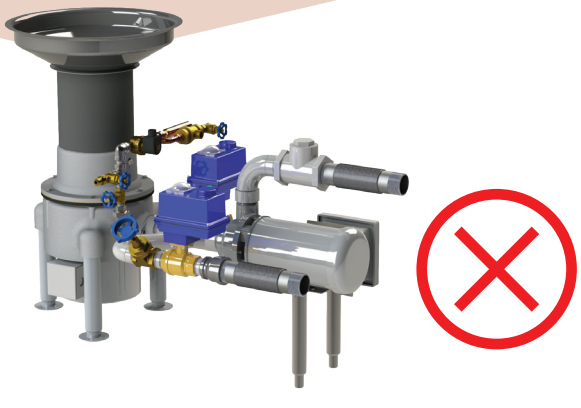

For technical support, please call: 717-397-5100 Option 3

ITW FOOD EQUIPMENT GROUP

somat waste reduction solutions

HOBART

01-555447
V1.0 (10/26)